

Test Report



Report No. A2230210476101001

Page 1 of 4

Company Name
Shown on Report SAVEWO LIMITED

Address 1/F & 2/F, 266-270 TEXACO ROAD, TSUEN WAN, NT, HONG KONG

The following sample(s) and sample information was/were submitted and identified by/on the behalf of the client

Sample Name	FreshQ
Type	FQ200
Sample Receiving State	Normal
Sample Received Date	May 8, 2023
Testing Period	May 8, 2023-May 15, 2023

Test Requested

No.	Test Item
1	IPX6

Test Result(s): Please see the following pages.

Approved by Roger Diao

Date Jun. 6, 2023

Roger xiao
Approved Signatory

No. R9C7BDA275

Centre Testing International Group Co., Ltd.

Hongwei Industrial Zone, Bao'an 70 District, Shenzhen, Guangdong, China



Test Report

Report No. A2230210476101001

Page 2 of 4

Tested Sample(s)

Sample No.	Sample Name	Type	Quantity
A2230210476101001	FreshQ	FQ200	1pc

Sample Photo(s)



A2230210476101001



Test Report

Report No. A2230210476101001

Page 3 of 4

Test Item: IPX6**1. Test Equipment**

Equipment Name	Model
Waterproof grade testing machine	JX1040

2. Environmental Conditions

Temperature:22.3℃; Humidity:56%RH

3. Test Standard: IEC 60529:2013**4. Test Condition**

Water flow:100L/min

Nozzle distance sample:2.5~3m

Nozzle inner diameter:12.5mm

Turntable speed:1r/min

Test time:3min

5. Test Result(s)

Sample No.	Test result(s) (Visual inspection)
A2230210476101001	No water enters inside the sample

Test Photo(s)

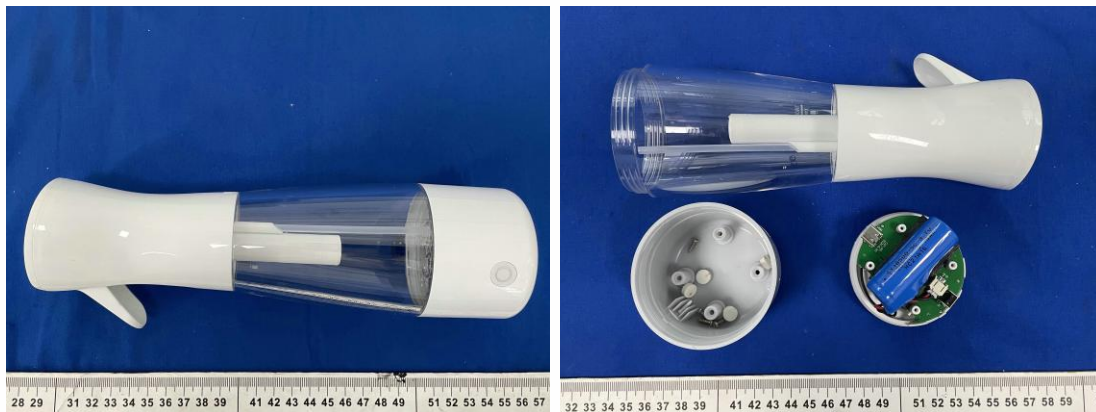
A2230210476101001



Test Report

Report No. A2230210476101001

Page 4 of 4

Sample Photo(s) after the test

A2230210476101001

A2230210476101001

Remark: The testing data and result(s) in this report is(are) just for scientific research, education, internal quality control and product development etc.

Statement:

- 1.This report is considered invalid without approved signature, special seal and the seal on the perforation;
- 2.Company Name and Address shown on Report, the sample(s) and sample Information was/were provided by the applicant who should be responsible for the authenticity which CTI hasn't verified;
- 3.The result(s) shown in this report refer(s) only to the sample(s) tested;
- 4.Without written approval of CTI, this report can't be reproduced except in full;
- 5.In case of any discrepancy between the English version and Chinese version of the testing reports(if generated), the Chinese version shall prevail.

*** End of Report ***

华测检测有限公司